"Warning - this appliance must be earthed"

Fuse replacement.
If the mains lead of this appliance is fitted with a BS 1363A 13 amp fused plug, to change a fuse in this type of plug use an A.S.T.A. approved fuse to BS 1362 type and proceed as follows:

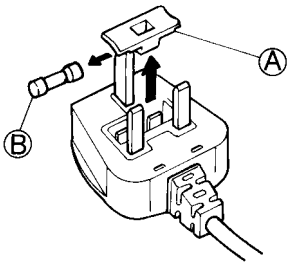

1. Remove the fuse cover (A) and fuse (B).
2. Fit replacement 13A fuse into fuse cover.
3. Refit both into plug.

Important: The fuse cover must be refitted when changing a fuse and if the fuse cover is lost the plug must not be used until a correct replacement is fitted.
Correct replacement are identified by the colour insert or the colour embossed in words on the base of the plug.
Replacement fuse covers are available from your local electrical store.

Connection to a rewireable plug

If the fitted plug is not suitable for your socket outlet, then it should be cut off and disposed of in order to avoid a possible shock hazard should it be inserted into a 13A socket elsewhere.

A suitable altenative plug should then be fitted to the cable. The wires in this mains lead are coloured in accordance with the following code;
BLUE - "NEUTRAL" ("N")
BROWN - "LIVE" ("L")
GREEN AND YELLOW - "EARTH" ("E")
1. The GREEN AND YELLOW wire must be connected to the terminal in the plug which is marked with the letter "E" or by the Earth symbol ⏚ or coloured green or green and yellow.
2. The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured black.
3. The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured red.

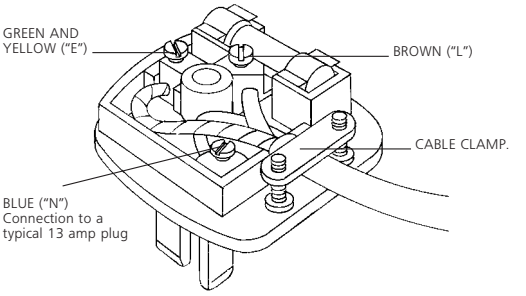

For the Republic of Ireland only
The information given in respect of Great Britain will frequently apply, but a third type of plug and socket is also used, the 2-pin, side earth type. In this case, the wire which is coloured GREEN AND YELLOW must be connected to the EARTH contact, and the other two wires to the two pins, irrespective of colour. The supply to the socket must be fitted with a 16 amp fuse.

GB

TABLE OF CONTENTS

DESCRIPTION OF THE APPLIANCE Page 61

CONTROLS Page 62

BEFORE USING THE APPLIANCE Page 63

PRECAUTIONS AND GENERAL SUGGESTIONS Page 63

HOW TO USE THE REFRIGERATOR COMPARTMENT Page 64

HOW TO USE THE FREEZER COMPARTMENT Page 65

HOW TO DEFROST AND CLEAN THE APPLIANCE Page 66

TROUBLE-SHOOTING GUIDE Page 66

AFTER-SALE SERVICE Page 67

INSTALLATION Page 67

DESCRIPTION OF THE APPLIANCE

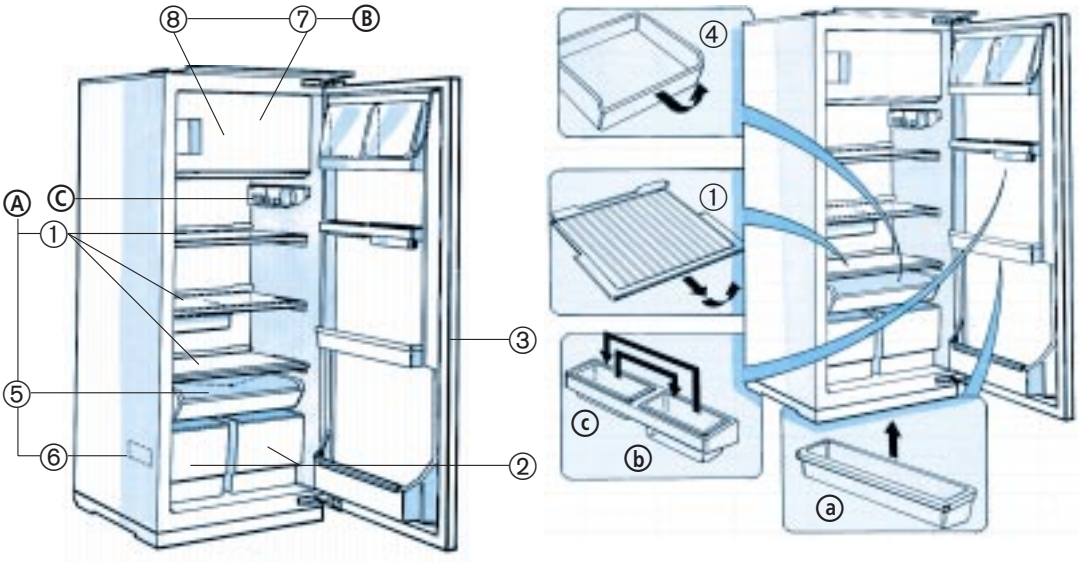

A) Refrigerator Compartment
(for storing fresh food)

1. Shelves (partially adjustable in height)

2. Fruit and vegetables drawers

3. Inside of the door with (if available):
a. Adjustable containers
b. Door box - top
c. Door box - bottom

4. Pull-out drawer (telescopic) (if available)

5. Defrost water run-off

6. Rating plate

B) Freezer Compartment (if available)
(with the ******* or ******** symbol, for freezing and/or storing fresh and frozen food, storing deep-frozen food and making ice cubes).

7. Freezing section

8. Ice cube trays

C) Controls

CONTROLS

1. Thermostat knob
2. Light switch
3. Light shield
4. Pilot light switch (if available)
5. Setting mark

BEFORE USING THE APPLIANCE

- After unpacking, make sure that the appliance is undamaged and that the door closes tightly. Any damage must be reported to your retailer within 24 hours after delivery of the appliance.
- **Before connecting the appliance to the power supply, let it stand for 2 hours.**
- The appliance is built with re-usable material. Follow the local disposal regulations.
- Make sure that the installation and the electrical connection are carried out by a qualified technician according to the Manufacturer's instructions and local safety regulations.

PRECAUTIONS AND GENERAL SUGGESTIONS

- Use the refrigerator compartment only for the storage of fresh food and the freezer compartment only for the storage of frozen food, the freezing of fresh food and to make ice cubes.
- Do not cover or close the vents of the appliance.
- Do not store glass containers with liquids in the freezer since they may burst.
- Do not eat ice cubes or ice lollies immediately after taking them out of the freezer since they may cause "cold" burns.
- Before carrying out any cleaning or maintenance, always unplug the appliance or switch the power supply off.
- To avoid the risk of children being trapped and therefore suffocating, do not allow them to play or hide inside the refrigerator.
- If the plug and the socket are not of the same type, have the socket replaced by a qualified technician.
- The electrical connection and the installation of the appliance must be carried out exactly as specified by the Manufacturer. If you have any doubts, please contact a qualified technician. The local electrical connection specifications must correspond to the rating plate data.
- Do not eat nor drink the contents of the artificial ice blocks.
- All necessary repairs must be carried out by a qualified technician.

Standards

- This appliance is designed to store food and conforms to EEC directive No. 89/109.
- This appliance has been designed, built and marketed in compliance with:
  - the safety targets of the "Low Voltage" EEC Directive 73/23
  - the protection requirements of the "EMC" EEC Directive 89/336 amended by EEC Directive 93/68.
- This appliance has been tested for leaks and conforms to VBG 20 safety standards for refrigerating units.
- When scrapping, make the appliance unusable by cutting the power cable off.
- Do not dump the appliance. Take it to the local disposal centre so that the refrigerant may be properly recovered and treated.

Information

- This appliance is free of CFC's (refrigerant circuit contains R134a) or free of HFC's (refrigerant circuit contains R600a – Isobutane). For more details, please refer to the rating plate on the appliance.

  For appliances with Isobutane (R600a)
  The refrigerant Isobutane is a natural gas of high environmental compatibility but which is inflammable. Therefore, it is essential to ensure that the ducts of the refrigerant circuit do not get damaged.

HOW TO USE THE REFRIGERATOR COMPARTMENT

This appliance is either a refrigerator, or a refrigerator with a ✱✱✱ compartment, or a refrigerator with a ✱✱✱ compartment.
The appliance has been designed to run at a room temperature ranging from +10°C to +38°C. For appliances with a ✱✱✱ compartment without pilot light (4), from +16°C to +38°C.

①

①. Getting started

After the appliance has been connected to the power supply, the inside light turns on when the refrigerator door is opened and the thermostat knob is not on position ●. After the temperature has been set, as described below, the appliance is ready for use.

②. To set the temperature:

- Thermostat knob **(1)** on ●: no cooling and light off.
- Thermostat knob **(1)** on **1**: minimum cooling
- Thermostat knob **(1)** on **3-4**: average cooling
- Thermostat knob **(1)** on **7**: maximum cooling

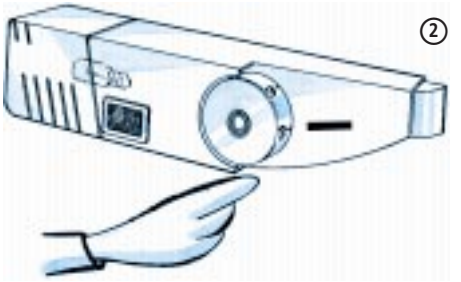
②

Important:
- Press the pilot light switch **(4)** when you freeze food and/or when room temperature drops **below 16°C.** *The pilot light* **(4)** *turns on.*
- When room temperature rises **above 16°C** turn the pilot light switch **(4)** off.
- Inside temperatures are affected by the position of the appliance, room temperature and frequency of door openings. Thermostat setting **(1)** may have to be changed depending on these factors.

How to store food in the refrigerator compartment

③

③. We suggest to arrange food as shown in the figure on the side:

1. Cooked food
2. Dairy products, tinned products, cheese, butter
3. Fish, meet
4. Sliced food
5. Fruit and vegetables
6. Small tins, eggs
7. Tubes, small tins
8. Sausage
9. Bottles

Notes:
- Do not store food in an open container since it would dry up.
- Do not store food that is still warm in the refrigerator compartment.
- Make sure that air circulates freely between stored food.

Defrosting of the refrigerator compartment is completely automatic.

HOW TO USE THE FREEZER COMPARTMENT

Only for appliances with ✱✱✱ compartment or ✱✱✱ compartment:

④ **In the ✱✱✱ freezing compartment it is possible to store frozen food.**
In the ✱✱✱ freezing compartment it is possible to store food for several months. Furthermore, it is possible to freeze foods. The quantity in kilos of fresh food that can be frozen within 24 hours is indicated on the plate (6).

④

Freezing of foods

⑤ Press the pilot light switch **(4)** 12 hours before introducing the food. *The pilot light turns on.*

- Set the thermostat **(1)** 12 hours before introducing the food.
- For freezing put the food in the middle of the ✱✱✱ compartment (at the back).

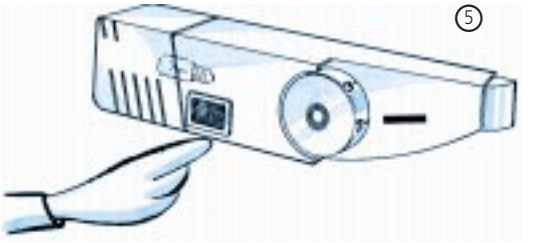
⑤

Important:

- Wrap and seal food in aluminium foil, cling film, air- and watertight plastic bags, polyethylene containers with lids, containers suitable for freezers.

When buying frozen food, make sure that:

- Wrapper or package is intact as the food may deteriorate. If it bulges or has spots of moisture on it, it means that it has not been stored in adequate conditions and that the contents may have started to thaw.
- Always use thermal bags or cold boxes for transport.
- Frozen food should always be purchased last.
- When at home, immediately store it in the freezer.
- Any food, even if partially thawed, cannot be re-frozen but must be eaten within 24 hours.
- Any rise in temperature of frozen food should be avoided or kept as short as possible. Frozen food should not be kept beyond the date indicated on the package.
- Always follow the instructions on how to store frozen food written on the packaging.

Making ice cubes

- Fill the ice cube trays **(8)** 3/4 full of water and place them on the bottom of the freezer compartment.
- Use the handle of a spoon to free the ice cube trays if they are stuck.

Do not use sharp or pointed tools.

HOW TO DEFROST AND CLEAN THE APPLIANCE

Before carrying out any cleaning or maintenance, always unplug the appliance.
You should defrost the freezer compartment when frost build-up reaches 3 mm in thickness.

- Remove all food from the ******* or ******* compartment and turn the thermostat knob to ●.
- Periodically clean the inside of the appliance with a sponge dampened in a solution of warm water and neutral pH detergent.
- Rinse and dry.
- Defrosting of the refrigerator compartment is completely automatic.
- ⑥ Regularly clean the defrost water run-off with the supplied brush so that the defrost water will flow down unhindered. After having cleaned the appliance, plug it in.

Do not use abrasives.

⑥

Long vacation

- Empty the appliance.
- Unplug the appliance.
- Defrost and clean the inside.
- Leave the door open to prevent odour from setting in.

TROUBLE-SHOOTING GUIDE

1. The temperature is not cold enough
- Is the food preventing the door from closing properly?
- Is the thermostat on the correct setting?
- Is air circulation blocked?

2. The temperature in the refrigerator compartment is too cold
- Is the thermostat on the correct setting?

3. The appliance is excessively noisy
- Has the appliance been properly installed?
- Do the pipes on the back touch and rattle?
- **Gurgling noises inside the refrigerating circuit are normal.**

4. The appliance does not work
- Is there a power failure?
- Is the plug properly inserted in the socket?
- Has the fuse blown?
- Is the appliance switched on?

5. There is water on the bottom of the refrigerator compartment
- Is the thermostat on the correct setting?
- Is the defrost water run-off clogged?

6. The inside light does not work ⑦.
First check point 4, then:
- Unplug the appliance.
- 1. Press the light shield **(3)**.
  2. Remove the light shield **(3)**.
- Replace the bulb **(220÷240 V, 15 W)**.

⑦

AFTER-SALE SERVICE

Before calling for Service:

1. Carefully check the Trouble-Shooting Guide to see if you can fix the problem yourself.

2. Let the appliance run for a while to see if the problem has cleared itself.

⑧ **If the appliance still does not work properly, please call for Service.**
The Service No. of the appliance is indicated on the rating plate (6) (inside on the bottom left).

⑧

INSTALLATION

⑨ Do not install the appliance close to any heat source.

- Place it in a dry and well ventilated room.
- Clean the inside (see chapter "How to defrost and clean the appliance").
- Assemble the accessories.
- Check door gasket tightness, especially in built-in appliances and after door swing has been changed.

⑨

Electrical connection

⑩ Check that the voltage on the rating plate **(6)** corresponds to the voltage in your home.

- Appliance earthing is compulsory by law. The Manufacturer shall not be liable for any damage to person or property arising from the failure to comply with this requirement.
- If the plug and the socket are not of the same type, have the socket replaced by a qualified technician.
- Do not use adapters, multiple sockets or extension cables.

4619 500 27970

РУССКИЙ PL H SK CZ Б RO GB

Printed in Italy 1/07/97

Total Chlorine Free

K.S. 10/12 M - IGLOO